


VISTA-10SE

Security System

Programming Guide

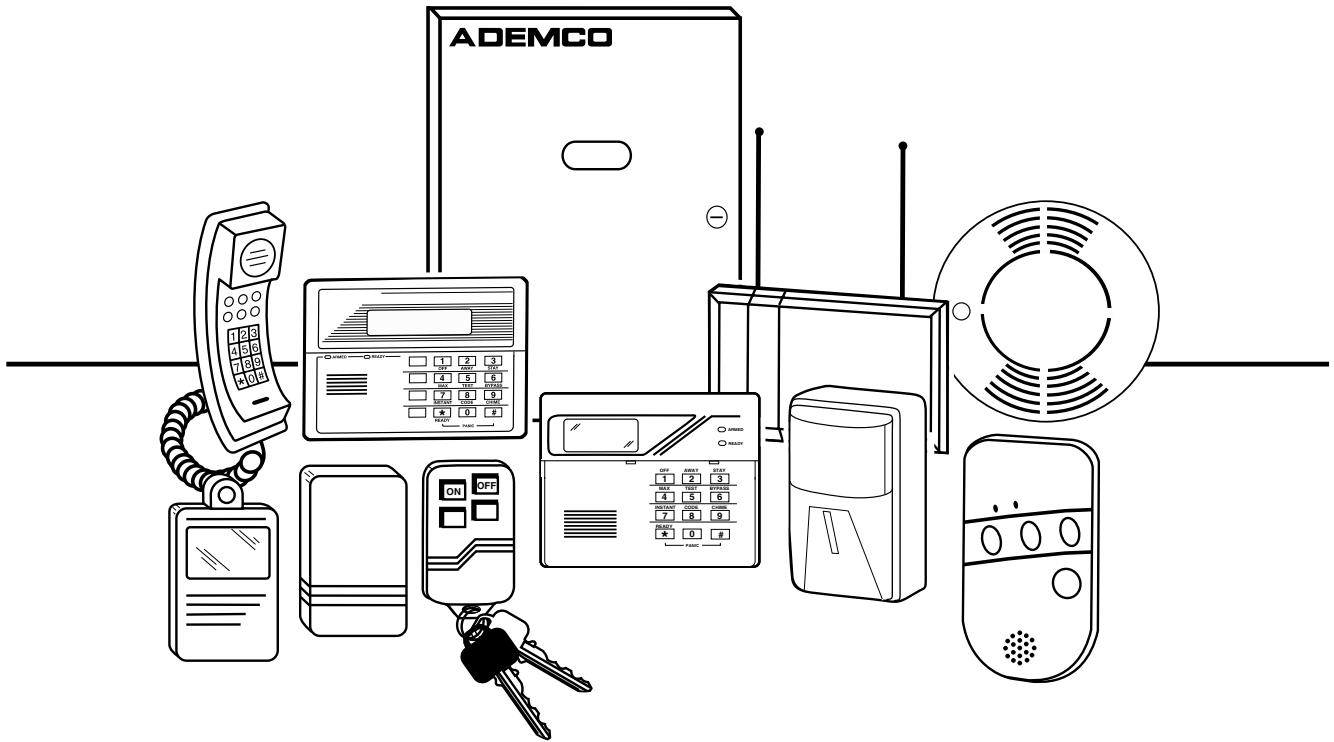

® ADEMCO

Table of Contents

Programming Guide	5
System Setup.....	5
Zone Sounds and Timing.....	5
Dialer Programming	5
Zone Assignment/Alarm Report Codes	6
RF Expansion Zones	7
Explanation of Zone Assignment Table Headings.....	7
System Status Report Codes.....	8
Restore Report Codes	8
Output and System Setup.....	8
Download Information	9
Output Relays Worksheet	10
Alpha Vocabulary List	11
Enrolled Transmitters.....	12
5800 Series Transmitter Input Loop Identification.....	13
Summary of Connections Diagram.....	15

Programming Form

Local programming requires the use of a 2-line alpha keypad (e.g., 6139) connected to the keypad terminals on the control.

*To set all program fields to ADEMCO default values: Press *97.*

Field Function	[] = Default Value	Programmed Values	Field Function	[] = Default Value	Programmed Values
----------------	---------------------	-------------------	----------------	---------------------	-------------------

SYSTEM SETUP (*20 – *30)

***20** INSTALLER CODE [4 1 1 1]
 Enter 4 digits, 0–9

***21** QUICK ARM ENABLE [0] †
 1 = enable; 0 = disable

***22** RF SYSTEM TYPE [0] †
 0 = none; 2 = 5800 (5881/5882)
 4 = 5800 w/ RF Jam Detection

***23** FORCED BYPASS FUNCTION [0] †
 0 = none; 1 = bypass faulted zones

***24** RF HOUSE ID CODE [00]
 00 = disable all wireless keypad usage;
 01–31 = when using 5827 and 5827BD keypad

***25** OUTPUT RELAY MODULE [0] †
 0 = none; 3 = 4204

***26** VOICE MODULE ACCESS CODE [0]
 1st digit: Enter 1-9;
 2nd digit: Enter only # + 11 for *, # + 12 for #.
 0 in either position = disables phone module

***27** OUTPUT TO LONG RANGE RADIO [0] †
 0 = no; 1 = yes. If yes selected, dialer reports to Primary No. (field *47) will also be sent via LRR. All dialer and LRR reports will be in Contact ID® format (overriding field *46)
 UL Installations: Must be set to 0.

ZONE SOUNDS AND TIMING (*28 – *39)

***28** SINGLE ALARM SOUNDING/ZONE [0] †
 0 = no limit; 1 = once per arming period
 UL Installations: Must be 0.

***29** FIRE SOUNDER TIMEOUT [0] †
 0 = fire sounder timeout; 1 = no fire sounder timeout.

***30** ALARM BELL TIMEOUT [1] †
 0 = none; 1 = 4 min; 2 = 8 min;
 3 = 12 min; 4 = 16 min
 UL Installations: Must be set to 1 (minimum).

***38** ENTRY DELAY [2] †
 0 = 0 sec; 1 = 20 sec; 2 = 30 sec; 3 = 45 sec;
 4 = 60 sec; 5 = 90 sec
 UL Installations: 45 seconds (maximum).
 EXIT Delay = ENTRY Delay + 15 sec.

***39** AUDIBLE EXIT WARNING [1] †
 0 = no; 1 = yes

DIALER PROGRAMMING (*40 – *50)

In fields *40, *41, and *42, enter up to the number of digits shown. Do not fill unused spaces. Enter 0–9; # +11 for *; # +12 for #; # +13 for a pause.

***40** PABX ACCESS CODE
 Enter up to 4 digits if PABX code is needed to access an outside line. If fewer than 4 digits are entered, do not fill unused spaces.
 Exit by pressing * (and press 41, if entering next field). To clear entries from this field, press *40* .

***41** PRIMARY PHONE NO.

 Enter up to 12 digits; do not fill unused spaces. If fewer than 12 digits entered, exit by pressing * (and press 42, if entering next field). To clear entries from this field, press *41* .

***42** SECONDARY PHONE NO.

 Enter up to 12 digits; do not fill unused spaces. If fewer than 12 digits entered, exit by pressing * (and press 43, if entering next field). To clear entries from this field, press *42* .

***43** SUBSCRIBER ACCOUNT NUMBER
 Enter 0–9; # +11 for B; # +12 for C; # +13 for D; # +14 for E; # +15 for F. Enter * as 4th digit if 3+1 dialer reporting is to be used. Enter 0 as the first digit of a 4-digit account number for Nos. 0000-0999.
 Exit by pressing * (and press next field).
 To clear entries from this field, press *43* .

Examples:
 For Acct. No. **1234**, enter: 1 | 2 | 3 | 4
 For Acct. No. **B234**, enter: #+11 | 2 | 3 | 4
 For Acct. No. **123**, enter: 1 | 2 | 3 | *

***45** PHONE SYSTEM SELECT [1] †
 If Cent. Sta. is **NOT** on a WATS line:
 0 = Pulse Dial; 1 = Tone Dial;
 If Cent. Sta. **IS** on a WATS line:
 2 = Pulse Dial; 3 = Tone Dial

† Entry of a number other than one specified will give unpredictable results.

***46 REPORT FORMAT** [7] †

- 0 = 3+1, 4+1 ADEMCO L/S STANDARD
- 1 = 3+1, 4+1 RADIONICS STANDARD
- 2 = 4+2 ADEMCO L/S STANDARD
- 3 = 4+2 RADIONICS STANDARD
- 6 or undefined = 4+2 ADEMCO EXPRESS
- 7 = ADEMCO CONTACT ID® REPORTING
- 8 = 3+1, 4+1 ADEMCO L/S EXPANDED
- 9 = 3+1, 4+1 RADIONICS EXPANDED

For an explanation of these formats, refer to the *SYSTEM COMMUNICATION* section of the Installation Instructions.

***47 SPLIT/DUAL REPORTING** [0]

0 = Disable (Backup report only)

TO PRIMARY PHONE NO. TO SECONDARY PHONE NO.

- | | |
|---------------------------------|------------------|
| 1 = Alarms, Restore, Cancel | Other Reports |
| 2 = All except Open/Close, Test | Open/Close, Test |
| 3 = Alarms, Restore, Cancel | All Reports |
| 4 = All except Open/Close, Test | All Reports |
| 5 = All (Dual Reporting) | All Reports |

TO PRIMARY PHONE NO. TO PAGING NO.* (Secondary)

- | | |
|---------------------------|--|
| 6 = All except Open/Close | **Alarms, Open/Close, Troubles |
| 7 = All reports | **Alarms, Troubles |
| 8 = All reports | **Alarms, Open/Close, Troubles |
| 9 = All except Open/Close | **Alarms, Open/Close for users 5-25***, Troubles |

* Can only be used if Primary reporting is ADEMCO Contact ID®.

** A 10-digit code is sent to the pager consisting of a 4-digit Subscriber No., a 3-digit Event code, and a 3-digit User (or Zone No.). See VISTA-10SE Installation Instructions for an explanation of the paging format.

*** Refer to field *47 in the *DATA FIELD DESCRIPTIONS* section of the Installation Instructions.

***48 15 SEC DIALER DELAY (BURG)** [0] †

0 = no delay; 1 = 15 sec delay
UL installations: 0 must be selected .

***49 PERIODIC TEST MESSAGE** [0] †

0 = none; 1 = 24 hours; 2 = weekly; 3 = monthly
(Enter Test Code in field *64.)
UL installations: 1 (24 hours) must be selected.

***50 SESCOA/RADIONICS SELECT** [0] †

0 = Radionics (0 – 9, B – F reporting);
1 = SESCOA (0 – 9 only reporting)
Select 0 for all other formats.

***51 CONFIRMATION OF ARMING DING** [0] †

- 0 = disables ding;
- 1 = enables 1/2 sec ding
- 2 = enables 1/2 sec ding from RF arming

***52 ZONE 3 RESPONSE TO OPEN** [0] †

0 = 400mS nominal; 1 = 10mS nominal

† Entry of a number other than one specified will give unpredictable results.

***56 / *58 ZONE ASSIGNMENT/ALARM REPORT CODES**

These fields are interactive modes. Fill in the required data on the worksheet below (and on next page) and follow the programming procedure in the installation manual. Zone Types are shown on the next page of this manual.

NOTE: All numbers in brackets [] are default settings.

ZONES ON CONTROL:

See explanation of headings on next page →

ZONE DESCRIPTION	ZONE NO. (Zn)	ZONE TYPE (ZT)	ALARM RPT CODE (Hex) (RC)	INPUT TYPE (In)	RF INPUT (RT)
Wired Zone 1	0 1	[01]	[01] [00]	HW	—
Wired Zone 2	0 2	[04]	[01] [00]	HW	—
Wired Zone 3	0 3	[03]	[01] [00]	HW	—
Wired Zone 4	0 4	[03]	[01] [00]	HW	—
Wired Zone 5	0 5	[09]	[01] [00]	HW	—
Wired Zone 6	0 6	[07]	[01] [00]	HW	—
Keypad Panic (* & #, or B)	0 7	[06]	[01] [00]	—	—
Keypad Duress	0 8	— —	[00] [00]	—	—
Tamper	0 9	0 5	[01] [00]	—	—
Keypad Panic (1 & *, or A)	9 5	[00]	[01] [00]	—	—
Keypad Panic (3 & #, or C)	9 6	[00]	[01] [00]	—	—

RF EXPANSION ZONES: Assign zone numbers (Zn) 10–25 to 5881L (up to 8); 5881M or 5881H (up to 16).

NOTE: All numbers in brackets [] are default settings.

ZONE DESCRIPTION	ZONE NO. (Zn)	ZONE TYPE (ZT)	ALARM RPT CODE (Hex) (RC)	INPUT TYPE (In)	LEARNED RF INPUT (L)
RF Zones ↓	1 0	[00]	[01] [00]	[03]	[1]
	1 1	[00]	[01] [00]	[03]	[1]
	1 2	[00]	[01] [00]	[03]	[1]
	1 3	[00]	[01] [00]	[03]	[1]
	1 4	[00]	[01] [00]	[03]	[1]
	1 5	[00]	[01] [00]	[03]	[1]
	1 6	[00]	[01] [00]	[03]	[1]
	1 7	[00]	[01] [00]	[03]	[1]
	1 8	[00]	[01] [00]	[03]	[1]
	1 9	[00]	[01] [00]	[03]	[1]
	2 0	[00]	[01] [00]	[03]	[1]
	2 1	[00]	[01] [00]	[03]	[1]
	2 2	[00]	[01] [00]	[03]	[1]
	2 3	[00]	[01] [00]	[03]	[1]
	2 4	[00]	[01] [00]	[03]	[1]
	2 5	[00]	[01] [00]	[03]	[1]

EXPLANATION OF ZONE ASSIGNMENT TABLE HEADINGS

Zn = ZONE NO.

Hardwired Zone Numbers run from 01 to 06. Wireless zones run from 10 to 25.

Pre-assigned zones (if programmed): 7, 8, and 9.

With Field *22 set for RF (5800), use Zone Nos. 10-25.

ZT =ZONE TYPE

00 = Zone Not Used

05 = Trouble Day/Alarm Night

10 = Interior w/ Delay

01 = Entry/Exit

06 = 24-Hr Silent

20 = Arm–STAY*

02 = *Do not use*

07 = 24-Hr Audible

21 = Arm–AWAY*

03 = Perimeter

08 = 24-Hr Aux

22 = Disarm*

04 = Interior Follower

09 = Fire

23 = No Alarm Response

* 20, 21, and 22 used for 5800 RF systems only

RC = ALARM REPORT CODE

Two hex digits. For each hex digit, enter: 00–09 for 0–9; 10 for A; 11 for B; 12 for C; 13 for D; 14 for E; 15 for F.

If 00 is entered in the first pair of boxes, there will be no report for that zone.

For Contact ID® reporting, this is an enabling code only. Enter any hex digit (other than 00) in the first pair of boxes. The second pair of boxes is ignored.

In = INPUT TYPE

HW = Hardwired zone (automatic for zones 1 – 6)

Enter 3 for RF: Supervised RF (default)

Enter 4 for UR: Unsupervised RF

Enter 5 for BR: Button-Type RF

L = RF INPUT LOOP

Used with 5800 RF Input Devices. Record transmitter input number.

SYSTEM STATUS REPORT CODES (*60 – *68)

TO PROGRAM SYSTEM STATUS & RESTORE REPORT CODES (*60– *75):

With a 3+1 or 4+1 Standard Format: Enter a code in the *first* box: 1–9, 0, B, C, D, E, or F. Enter #+10 for 0, #+11 for B, #+12 for C, #+13 for D, #+14 for E, #+15 for F.

A 0 (*not* #+10) in the *first* box will disable a report.

A 0 (*not* #+10) in the *second* box will result in automatic advance to the next field when programming.

With an Expanded or 4+2 Format: Enter codes in *both* boxes (1st and 2nd digits) for 1–9, 0, or B–F, as described above.

A 0 (*not* #+10) in the *second* box will eliminate the expanded message for that report.

A 0 (*not* #+10) in *both* boxes will disable the report.

With ADEMCO Contact ID® Reporting: Enter any digit (other than 0) in the *first* box, to enable zone to report (entries in the *second* boxes will be ignored).

A 0 (*not* #+10) in the *first* box will disable the report.

Examples:

For Code **3** (single digit), enter: |

For Code **3 2** (two digits), enter: |

For Code **B 2** (Hexadecimal), enter: |

- *60 TROUBLE REPORT CODE [00] |
 - *61 BYPASS REPORT CODE [00] |
 - *62 AC LOSS REPORT CODE [00] |
 - *63 LOW BAT REPORT CODE [00] |
 - *64 TEST REPORT CODE [00] |
 - *65 OPEN/EXIT ALARM RPT CODE [00] |
- 2nd digit of OPEN REPORT is automatically sent as the user number if expanded or 4+2 reporting is selected.
- 2nd digit of EXIT ALARM REPORT is automatically sent as the 2nd digit of the zone alarm report code programmed in *56, if expanded or 4+2 reporting is selected.
- *66 AWAY/STAY CLOSE RPT CODE [00] |
- 2nd digit of any CLOSE REPORT is automatically sent as the user number, if expanded or 4+2 reporting is selected.
- *67 RF XMTR LOW BAT RPT CODE [00] |
 - *68 CANCEL REPORT CODE [00] |

RESTORE REPORT CODES (*70 – *75)

- *70 ALARM RESTORE RPT CODE [0]
- 2nd digit is automatically sent as the 2nd digit of the zone alarm report code programmed in *56, if expanded or 4+2 reporting is selected.
- *71 TROUBLE RESTORE RPT CODE [00] |
 - *72 BYPASS RESTORE RPT CODE [00] |

- *73 AC RESTORE RPT CODE [00] |
- *74 LOW BAT RESTORE RPT CODE [00] |
- *75 RF XMTR LO BAT RST RPT CODE [00] |

OUTPUT AND SYSTEM SETUP (*80 – *93)

- | | |
|----------------------------------|---|
| *80 OUTPUT RELAYS | <i>Program only if relays are to be used. Refer to the Output Relays Worksheet on page 8.</i> |
| *81 ZONE LISTS FOR OUTPUT RELAYS | <i>Program only if relays are to be used. Refer to the Output Relays Worksheet on page 8.</i> |
- *82 CUSTOM ALPHA EDITING (Also entered from field *56) *See procedure in Installation Instructions.*
 - *91 OPTION SELECTION (AAV) [0]
- 0 = None;
4 = AAV;
8 = Enable Exit Delay Restart;
+ 12 = Both enabled
0 for UL installations.
- NOTE:** AAV should not be used when Paging or Alarm reports are being sent to a secondary number. See Audio Alarm Verification (AAV) in the Installation Instructions.

- *92 REPORTS PER ARMED PERIOD [0]
- 0 = 10 max total alarm + alarm restore;
1 = unlimited
- | | | |
|---|-------------------------------------|-------------------------------------|
| | 1st Entry | 2nd Entry |
| *93 DYNAMIC SIGNALING [0] <input type="text" value=""/> † | [0] <input type="text" value=""/> † | [0] <input type="text" value=""/> † |
| | DS Delay | DS Priority |
- DS Delay; 0-15 times a 15-sec delay
1 = 15 secs; 2 = 30 secs; 3 = 45 secs;
4 = 60 secs...etc.
0 = No delay. (Reports are sent to both the Primary Phone No. and LRR).
UL installations: set for 0 (No delay)
- DS Priority; 0 = Send message to Primary Phone No. first;
1 = Send message to LRR first

† Entry of a number other than one specified will give unpredictable results.

DOWNLOAD INFORMATION (*94- *97)

***94** DOWNLOAD PHONE NO.

--	--	--	--	--	--	--	--	--	--	--	--

Enter up to 12 digits, 0–9; #+11 for *; #+12 for #; # + 13 for a pause. Do not fill unused spaces. If fewer than 12 digits entered, exit field by pressing * (and press 95, if entering next field). To clear entries from this field, press *94*.

***95** RING DET COUNT FOR DWNLING [0]

0 = Disable Station Initiated Download; 1–14 = number of rings (1–9, # +10 =10, # +11 =11, # +12 =12, # +13 =13, # +14 =14); 15 = answering machine defeat (# +15 =15)

***96** INITIALIZES DOWNLOAD ID, SUBSCRIBER ACCOUNT NO. FOR INITIAL DOWNLOAD. No data entry required.

*** 97** SETS ALL PROGRAM FIELDS TO ADEMCO DEFAULT VALUES. No data entry required.

EXITS (*98, *99)

***98** Exits programming mode and *prevents* re-entry by: Installer Code + 8+ 0. If *98 is used to exit programming mode, system must be powered down. Then power up, and press * and # within 50 seconds of power-up.

***99** Exits programming mode and *allows* re-entry by: Installer Code + 8 + 0; or powerup, then press * and # within 50 seconds of powerup.

OUTPUT RELAYS WORKSHEET FOR FIELDS *80 and *81.

Applicable only if 4204 relays are to be used.

***80 OUTPUT RELAYS** – This is an Interactive Menu mode. Fill in the required data on the worksheet below and follow the programming procedure in the installation manual as you enter the data in response to the displays and prompts that appear in sequence.

- Notes:** 1. For Relays, field *25 must be programmed for a 4204 relay module (enter 3).
 2. Tamper of contacts or an expansion unit cannot be used to operate relays.

OUTPUT RELAY	RELAY ACTION (A)	S T A R T either or both			S T O P either or both	
		EVENT (EV)	ZONE LIST (ZL)	ZONE TYPE SYSTEM OPERATION (ZT)	RESTORE of ZONE LIST (ZL)	ZONE TYPE/ SYSTEM OPERATION (ZT)
01	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>
02	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>
03	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>
04	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>

Where:

A = DEVICE ACTION 0 = No response; 1 = Close for 2 sec; 2 = Close and stay closed; 3 = Pulse on and off.

EV = EVENT 0 = Not used; 1 = Alarm; 2 = Fault; 3 = Trouble.

ZL = ZONE LIST 1, 2, or 3 (from Field *81) or 0 = Not used.

START ZONE LIST: Upon alarm, fault, or trouble of ANY zone on this list, relay action will **START**.

STOP RESTORE of ZONE LIST: Upon restore of ALL zones on this list, device action will **STOP**. It need not be same list as used for START.

ZT = ZONE TYPE/SYSTEM OPERATION

Choices for Zone Types are:

- | | |
|------------------------------|------------------------|
| 00 = Not Used | 06 = 24-Hr Silent |
| 01 = Entry/Exit #1 | 07 = 24-Hr Audible |
| 03 = Perimeter | 08 = 24-Hr Aux |
| 04 = Interior Follower | 09 = Fire |
| 05 = Trouble Day/Alarm Night | 10 = Interior w/ Delay |

Note: Any zone in "ZT" going into alarm, fault, or trouble will actuate relay.
 Any zone of that type that restores will stop relay action.

Choices for System Operation are:

- | | |
|-----------------------------|-------------------------|
| 20 = Arming–STAY | 36 = At Bell Timeout** |
| 21 = Arming–AWAY | 38 = Chime |
| 22 = Disarming (Code + OFF) | 39 = Any Fire Alarm |
| 31 = End of Exit Time | 40 = Bypassing |
| 32 = Start of Entry Time | 41 = AC Power Failure |
| 33 = Any Burglary Alarm | 42 = System Battery Low |
| 34 = Code + # + 7 Key Entry | 58 = Duress |
| 35 = Code + # + 8 Key Entry | |

** Or at Disarming, whichever occurs first.

***81 ZONE LISTS FOR OUTPUT RELAYS** Record desired zone numbers. More or fewer boxes than shown may be needed, since any list may include *any* or *all* of system's zone numbers.

Zone List 01: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , ...etc.

Zone List 02: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , ...etc.

Zone List 03: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , ...etc.

ALPHA VOCABULARY LIST

(For Entering Zone Descriptors)

NOTE: Some rarely used words appearing in previously published lists have been deleted from the list below. Use only this list for selecting zone descriptors.









000 (Word Space)	• 057 DOOR	L	R
A	• 059 DOWN	• 106 LAUNDRY	155 RADIO
• 001 AIR	• 060 DOWNSTAIRS	• 107 LEFT	• 156 REAR
• 002 ALARM	061 DRAWER	108 LEVEL	157 RECREATION
004 ALLEY	• 062 DRIVEWAY	• 109 LIBRARY	159 REFRIGERATION
005 AMBUSH	• 064 DUCT	• 110 LIGHT	160 RF
• 006 AREA	E	111 LINE	• 161 RIGHT
• 007 APARTMENT	• 065 EAST	• 113 LIVING	• 162 ROOM
• 009 ATTIC	066 ELECTRIC	• 114 LOADING	163 ROOF
010 AUDIO	067 EMERGENCY	115 LOCK	S
B	068 ENTRY	116 LOOP	164 SAFE
• 012 BABY	• 069 EQUIPMENT	117 LOW	165 SCREEN
• 013 BACK	• 071 EXIT	• 118 LOWER	166 SENSOR
• 014 BAR	072 EXTERIOR	M	• 167 SERVICE
• 016 BASEMENT	F	• 119 MACHINE	• 168 SHED
• 017 BATHROOM	• 073 FACTORY	121 MAIDS	169 SHOCK
• 018 BED	075 FAMILY	122 MAIN	• 170 SHOP
• 019 BEDROOM	• 076 FATHERS	• 123 MASTER	171 SHORT
020 BELL	• 077 FENCE	• 125 MEDICAL	• 173 SIDE
• 021 BLOWER	• 079 FIRE	126 MEDICINE	174 SKYLIGHT
• 022 BOILER	• 080 FLOOR	128 MONEY	175 SLIDING
023 BOTTOM	081 FLOW	129 MONITOR	• 176 SMOKE
025 BREAK	082 FOIL	• 130 MOTHERS	• 178 SONS
• 026 BUILDING	• 083 FOYER	• 131 MOTION	• 179 SOUTH
C	084 FREEZER	132 MOTOR	180 SPRINKLER
028 CABINET	• 085 FRONT	N	• 182 STATION
• 029 CALL	G	• 134 NORTH	184 STORE
030 CAMERA	• 089 GARAGE	135 NURSERY	• 185 STORAGE
031 CAR	• 090 GAS	O	186 STORY
033 CASH	091 GATE	• 136 OFFICE	190 SUPERVISED
034 CCTV	• 092 GLASS	• 138 OPEN	191 SUPERVISION
035 CEILING	093 GUEST	139 OPENING	192 SWIMMING
036 CELLAR	094 GUN	• 140 OUTSIDE	193 SWITCH
• 037 CENTRAL	H	142 OVERHEAD	T
038 CIRCUIT	• 095 HALL	P	194 TAMPER
• 040 CLOSED	• 096 HEAT	143 PAINTING	196 TELCO
• 046 COMPUTER	098 HOLDUP	• 144 PANIC	197 TELEPHONE
047 CONTACT	099 HOUSE	145 PASSIVE	• 199 TEMPERATURE
D	100 INFRARED	• 146 PATIO	200 THERMOSTAT
• 048 DAUGHTERS	• 101 INSIDE	147 PERIMETER	• 201 TOOL
049 DELAYED	102 INTERIOR	• 148 PHONE	202 TRANSMITTER
• 050 DEN	103 INTRUSION	150 POINT	U
051 DESK	J	151 POLICE	• 205 UP
• 052 DETECTOR	104 JEWELRY	152 POOL	• 206 UPPER
• 053 DINING	• 105 KITCHEN	• 153 POWER	250 Custom Word #1
054 DISCRIMINATOR			251 Custom Word #2
055 DISPLAY			252 Custom Word #3
			253 Custom Word #4
			254 Custom Word #5

NOTE: Bulleted (*) words in **boldface type** are those that are also available for use by the 4285/4286 VIP (Phone) Modules. If using a Phone Module, and words other than these are selected for alpha descriptors, the module will not provide annunciation of those words.

CHARACTER (ASCII) CHART

(For Adding Custom Words)

32 (space)	40 (49 1	58 :	67 C	76 L	85 U
33 !	41)	50 2	59 ;	68 D	77 M	86 V
34 "	42 *	51 3	60 <	69 E	78 N	87 W
35 #	43 +	52 4	61 =	70 F	79 O	88 X
36 \$	44 ,	53 5	62 >	71 G	80 P	89 Y
37 %	45 -	54 6	63 ?	72 H	81 Q	90 Z
38 &	46 .	55 7	64 @	73 I	82 R	
39 '	47 /	56 8	65 A	74 J	83 S	
40 (48 0	57 9	66 B	75 K	84 T	

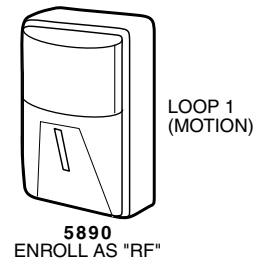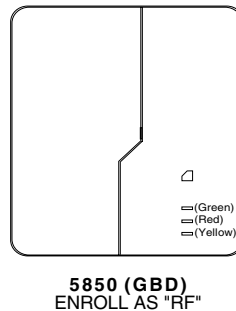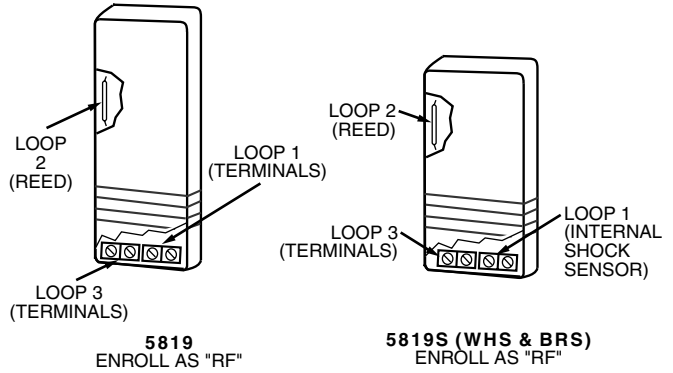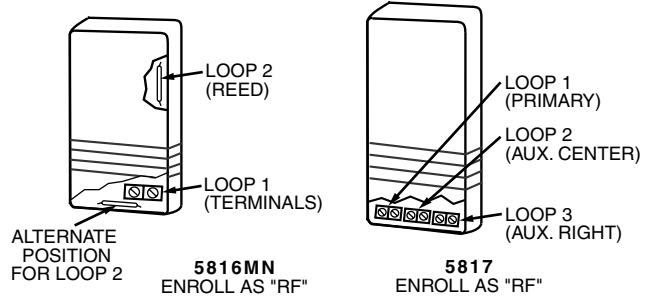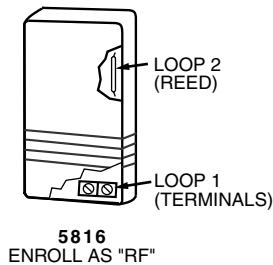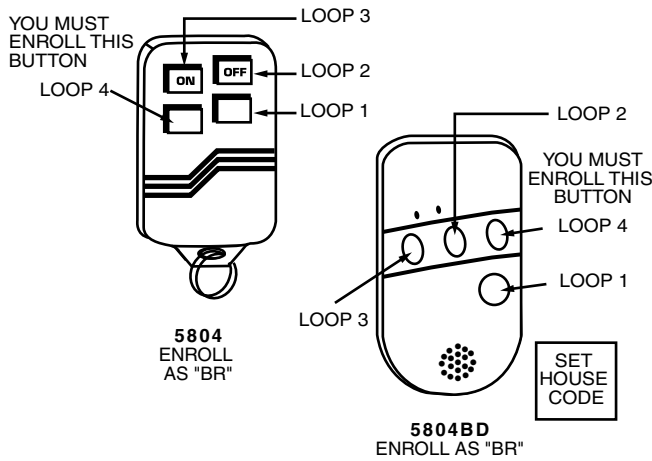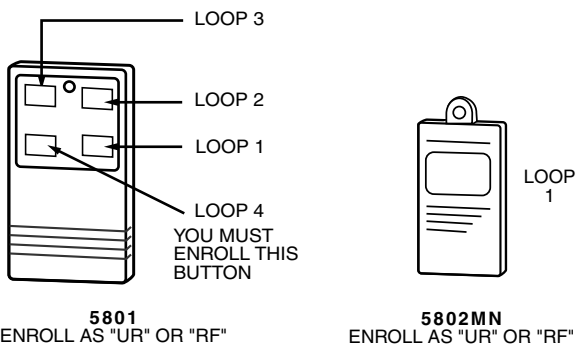


5800_trans_loop-V0

5800 Series Transmitter Input Loop Identification



The 5802, 5802MN, 5802MN2, 5804, 5804BD, 5814, 5816TEMP, 5819, 5819S(WHS & BRS), 5827BD, and 5850 transmitters are **not** intended for use in UL installations.

NOTES

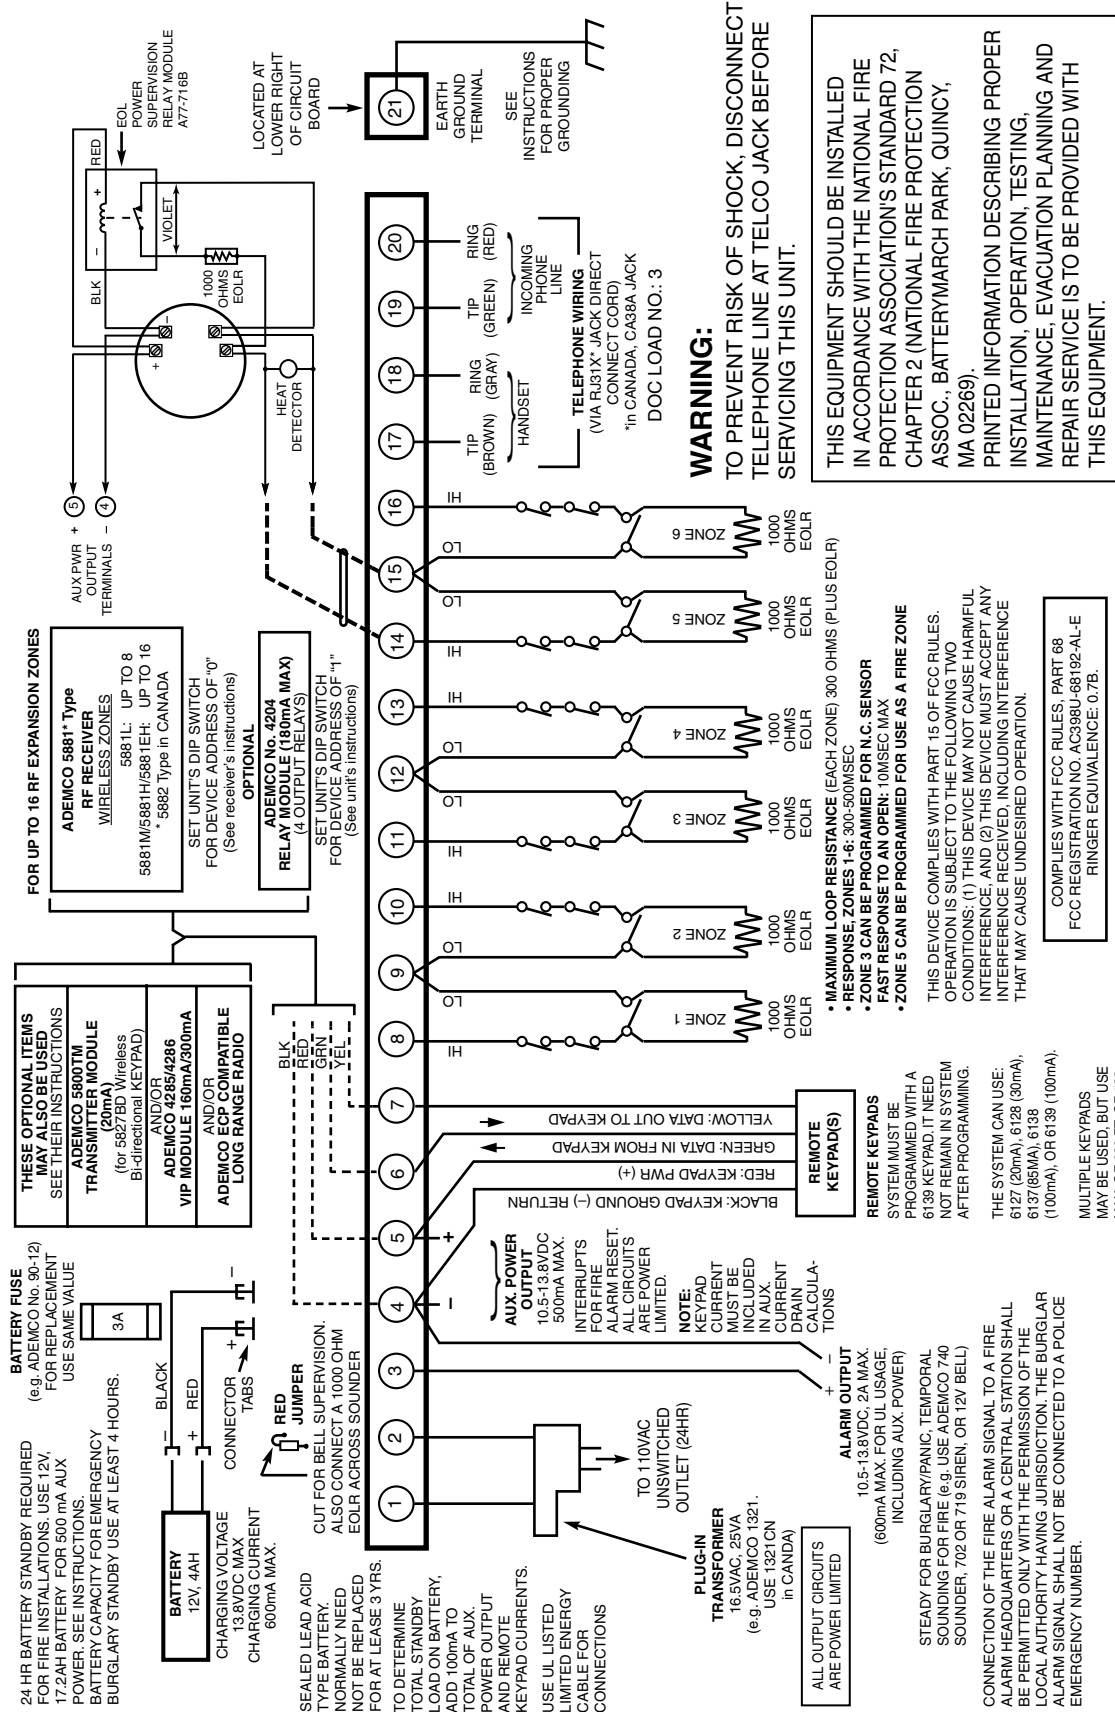

VISTA-10SE SUMMARY OF CONNECTIONS DIAGRAM

WARNING: OWNER'S INSTRUCTION NOTICE NOT TO BE REMOVED. WEEKLY TESTING IS REQUIRED TO ENSURE PROPER OPERATION OF THIS SYSTEM.

ADEMCO
GROUP

165 Eileen Way, Syosset, New York 11791
Copyright © 2001 PITTWAY CORPORATION



N7227PRGDV3 06/01